

Mario Kart Racing Wheel Pro Mini  
for Nintendo Switch™ 2

# Instruction Manual

Thank you for purchasing this product.  
Before using this product, please read the instructions carefully.  
After reading the instruction manual, please keep it for reference.

## Table of Contents

Quick Start Guide .....	2-3	How to Set Up .....	6
Caution .....	3	How to Connect .....	6-8
Contents .....	4	Assign Mode .....	8-9
Compatibility .....	4	Button Hold Function .....	10
Layout and Features .....	4-5	Specifications .....	10



### ◀ Compatible Software

<https://stores.horiusa.com/nsx-122/compatibility/>

\*Please check that your Nintendo Switch™ 2 is up to date before using this product.


\*This controller works only in TV Mode.

\*This product does not support the following features:


- Gyroscope
- Accelerometer
- IR Motion Camera
- Player LED
- HD rumble 2
- HOME Button Notification LED
- NFC
- Mouse sensor
- amiibo NFC
- Audio jack
- Waking system from Sleep Mode

# Quick Start Guide

- 1** Make sure that your Nintendo Switch™ 2 is updated with the latest system software.

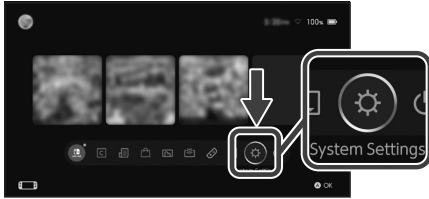


From the Home Menu select "Settings".

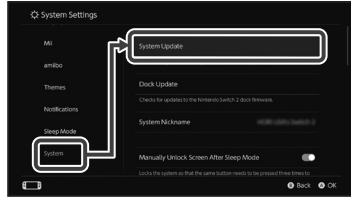


Select "System" and then "System Update" to update to the latest system software. (Please skip this step if the system already has the latest system software.)



- 2** Mount the steering unit onto a flat, stable surface.

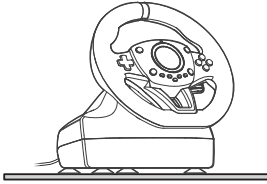

See "How to Set Up" for more information.  
⇒ P.6

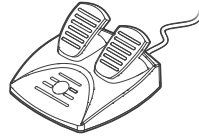


- 3** Adjust the switches based on your usage environment.

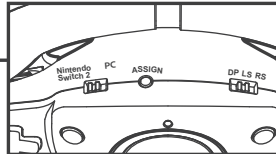
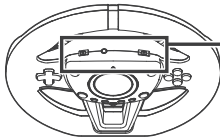


See "How to Connect" for more information.  
⇒ p.6-8

- 4** Connect all of the cables accordingly.

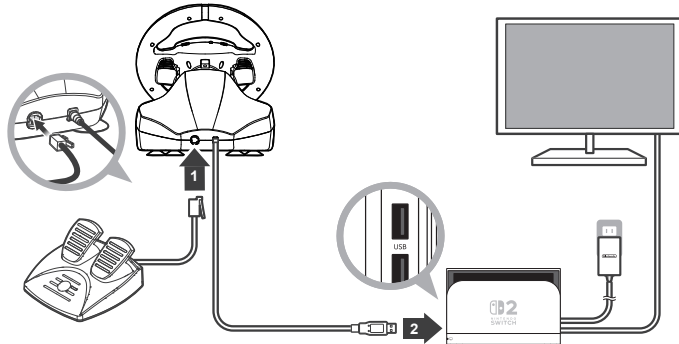

- 5** Turn the steering wheel fully to the right, then fully to the left. Then, press down fully on the L pedal and R pedal one at a time. This ensures proper wheel calibration.

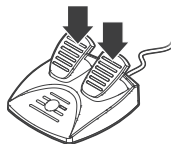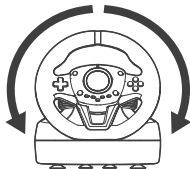


## Caution


Parents / Guardians:  
Please read the following information carefully.

- This product is for indoor use only.
- Please use this product where the room temperature is 0-40°C (32-104°F).
- This product contains small parts. Keep away from children under 3 years old.
- Keep this product away from small children or infants. Seek medical attention immediately if any small parts are swallowed.
- Keep the product away from dusty or humid areas.
- Do not use this product if it has been damaged or modified.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not place this product near heat sources or leave under direct sunlight for an extended period. Overheating may cause malfunction.
- Do not use this product with a USB hub or extension cable.
- Do not touch the metal parts of the USB plug.
- Do not pull roughly or bend the cable of the product.
- Be careful not to get your foot caught on the cable. Doing so may cause bodily injury or damage to the cable.
- Do not bend the cables roughly or use the cables while they are bundled.
- Long cord. Strangulation hazard.
- Do not apply strong impact or weight on the product.
- Do not disassemble, modify or attempt to repair this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.
- Keep your fingers away from the foot pedals during gameplay.
- Do not insert the USB plug into socket-outlets.
- The packaging must be retained since it contains important information.
- Please retain this instruction manual for your future reference.
- The normal function of the product may be disturbed by strong electro-magnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please relocate to an area which does not have electro-magnetic interference to use the product.

# Contents

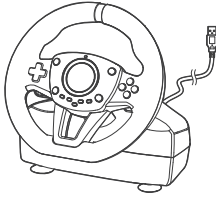

Steering wheel × 1

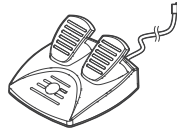

Foot pedals × 1



Instruction Manual × 1

## Compatibility

**Nintendo Switch™ 2**  
**Nintendo Switch™**  
**Nintendo Switch™ – OLED Model**

### Important



Make sure that your Nintendo Switch™ 2 is updated with the latest system software.

\*Internet is required for system software updates.

### PC

Supported OS	Windows 10 / 11	
Input Method	XInput	✓
	DirectInput	✗
System Requirements	USB-A Port	

## Layout and Features

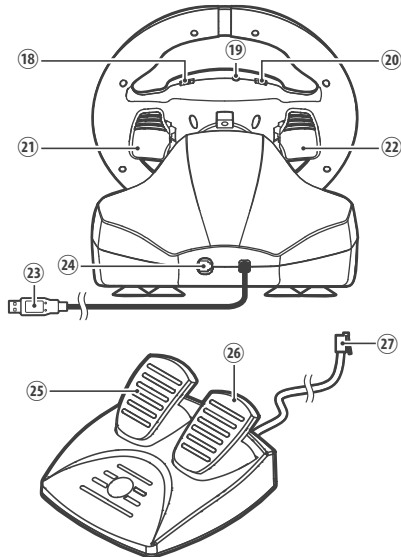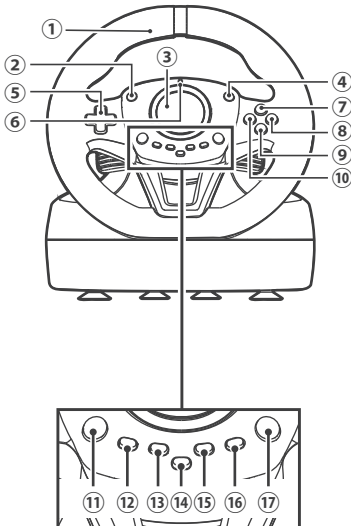

## Steering Unit

---

① ... Steering (L Stick X Axis)	[PC] Steering (L Stick X Axis)
② ... ZL Button	[PC] LT Button
③ ... ITEM Button (ZL Button)	[PC] ITEM Button (LT Button)
④ ... ZR Button	[PC] RT Button
⑤ ... Directional Pad (Up / Down / Left / Right)	[PC] D-Pad (Up / Down / Left / Right)
⑥ ... LED	
⑦ ... X Button	[PC] X Button
⑧ ... A Button	[PC] A Button
⑨ ... B Button	[PC] B Button
⑩ ... Y Button	[PC] Y Button
⑪ ... L Stick Button	[PC] L Stick Button
⑫ ... - Button	[PC] BACK Button
⑬ ... Capture Button	[PC] N/A
⑭ ... C Button	
*Compatible only with Nintendo Switch™ 2. Not usable with Nintendo Switch™ or PC.	
⑮ ... HOME Button	[PC] GUIDE Button
⑯ ... + Button	[PC] START Button
⑰ ... R Stick Button	[PC] R Stick Button

---

## Steering Unit (Back View)

---

⑱ ... Directional Buttons Toggle Switch	
⑲ ... ASSIGN Button	
⑳ ... Hardware Toggle Switch	
㉑ ... R Paddle (R Button)	[PC] R Paddle (RB Button)
㉒ ... L Paddle (L Button)	[PC] L Paddle (LB Button)
㉓ ... USB Type-A Plug	
㉔ ... Foot Pedal Connection	

---

## Foot Pedals


---

㉕ ... L Pedal (B Button)	[PC] L Pedal (LT Button)
㉖ ... R Pedal (A Button)	[PC] R Pedal (RT Button)
㉗ ... Modular Plug	

---

## How to Set Up


Flat, hard surface required (i.e., table)

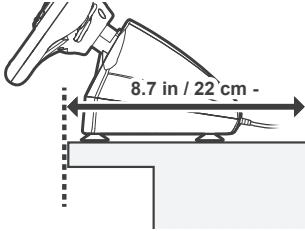


Stick to the indicated line.



 
Do not attach to any unstable surface as shown in the diagram below.




Uneven

 

 
This product is made of breathable material




Dust and dirt can stick to this product

 

Too thin or too soft

 



Fragile (i.e., glass)

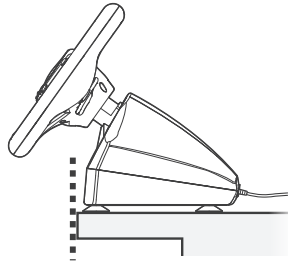

## How to Connect

1

Connect as shown in the image below:

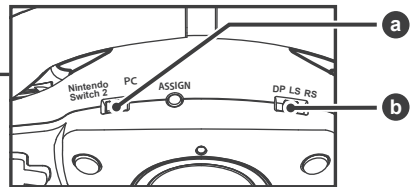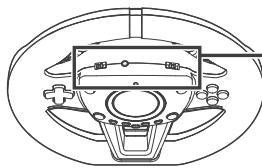


### a Hardware Toggle Switch

Set based on hardware.



 Nintendo Switch™ 2  
 Nintendo Switch™  
 Nintendo Switch™ – OLED Model



PC


**b**
 
## Directional Buttons Toggle Switch


You can assign the functions of the Left Stick or Right Stick to the Directional Pad.

\*Directional buttons do not support analog input.

\*The Directional Buttons Toggle Switch may not be compatible with some software titles. Please refer to the software's instruction manual for further information.

**2**

Connect as shown in the image below:

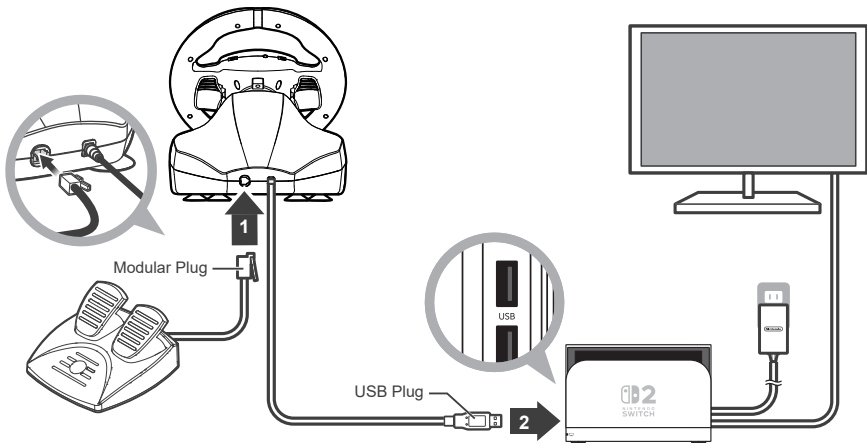


**Please follow the instructions below to avoid malfunction.**

- \*Do not use this product with a USB hub or extension cable.
- \*Do not plug / unplug the controller during gameplay.
- \*Do not push any buttons or move the steering unit or pedals when doing the following:
  - Connecting this product to Nintendo Switch™ 2 or PC
  - When turning on the power of Nintendo Switch™ 2 or PC
  - When waking Nintendo Switch™ 2 or PC from sleep mode

3

Turn the steering wheel fully to the right, then fully to the left. Then, press down fully on the L pedal and R pedal one at a time. This ensures proper wheel calibration.

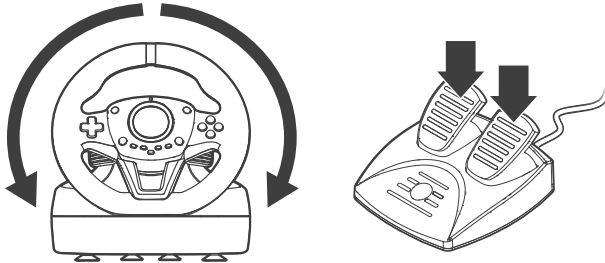

Please perform this before each of the following actions:

- After connecting this product to Nintendo Switch™ 2 or PC
- After turning on the power of Nintendo Switch™ 2 or PC
- After waking Nintendo Switch™ 2 or PC from sleep mode



**If you notice unusual steering or pedal behavior**

- Follow Step 2 to reconnect the steering unit and foot pedal.
- Step 3 may not have been completed correctly. Please rotate the steering wheel fully to the right and left once on each side, then press the L and R pedals all the way down, one time each.

**Assign Mode**

You can assign button functions with this feature.




**Programmable Buttons**

ZL Button / ZR Button / L Stick Button / R Stick Button / L Paddle / R Paddle / L Pedal / R Pedal / ITEM Button

**Assignable Functions**

A Button / B Button / X Button / Y Button / L Button / R Button / ZL Button / ZR Button / L Stick Button / R Stick Button / Directional Button (Right / Down / Left / Up) / Left Stick (Right / Down / Left / Up) / Right Stick (Right / Down / Left / Up) / ITEM Button

	Operation	LED Status	Setting Status
①		<p>LED will flash (slowly).</p>	
②	<p>Push the button you want to assign</p> <p>ZL Button / ZR Button / L Stick Button / R Stick Button / L Paddle / R Paddle / L Pedal / R Pedal / ITEM Button</p>	<p>LED will flash (quickly).</p>	<p><b>Start setting</b></p> <p>*Button input from the controller to the Nintendo Switch™ 2 will be disabled.</p>

③	Push Programmable Button to assign  A Button / B Button / X Button / Y Button / L Button / R Button / ZL Button / ZR Button / L Stick Button / R Stick Button / ITEM Button	 LED will turn on.	<b>Finish setting</b>
	 Directional Button (Right / Down / Left / Up) / Left Stick (Right / Down / Left / Up) / Right Stick (Right / Down / Left / Up)		



### Ex. When assigning the L Stick Button to Directional Button(Left)

- ① Set the Direction Buttons  
 Toggle Switch to LS  
 (the Directional button function  
 will change to the L Stick)



- ② Press the  
 Directional Button (Left).



\*Multiple functions cannot be assigned to a single button.

\*Capture Button / + Button / - Button / HOME Button / ASSIGN Button / C Button functions cannot be assigned.

\*If step ② is not performed after step ①, or step ③ is not performed after step ②, LED will turn off after 4 seconds, and the button assignment mode will automatically end.



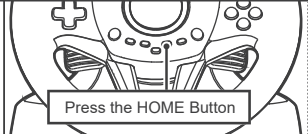

\*When the LED turns on, it indicates that a button is remapped and will not turn off until button function is reset to default.

\*Controller settings will remain saved even when the Nintendo Switch™ 2 is turned off or the USB is disconnected.

### How to Reset buttons Individually

For step ③, press the same button from step ② to individually reset buttons to default.

### How to Reset All Buttons

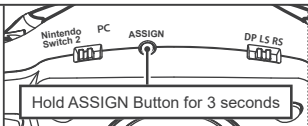	Operation	LED Status	Setting Status
①	 Hold ASSIGN Button for 3 seconds	 LED will flash (slowly).	
②	 Press the HOME Button	 LED will turn off	<b>Reset All button Settings.</b> All button assignments will reset to its default settings.

## Button Hold Function

By holding down the ZL button, you can activate the button hold function where the button remains pressed even after you release it.

\*This feature is for "Mario Kart 8 Deluxe," where you can hold an item behind your kart instead of throwing the item. This feature is not compatible with "Mario Kart World."

### How to Enable



ZL Button

Press for 1 second



LED

Green LED turns on

### How to Disable



Press Once:  
ITEM Button / ZL Button / L Paddle



LED

Turns off



\*The button hold function will be disabled if another button function is assigned to the ZL button. Additionally, assigning the ZL button function to a different button will not enable the button hold function.



When using the button hold function to hold an item behind the kart, the button hold function will not automatically deactivate even if the item disappears.

To release the button hold, press either the ITEM Button, ZL Button, or L Paddle before using the next item.

## Specifications

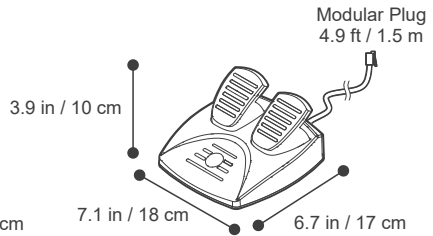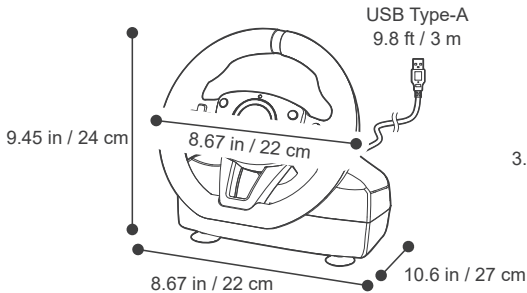

Angle of Rotation : 180°

1.6 lbs / 0.7 kg

0.7 lbs / 0.3 kg

**Need help with this product?  
Please visit this website for support.**



<https://stores.horiusa.com/nsx-122/support/>

**CAUTION:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**THE FCC WANTS YOU TO KNOW**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAN ICES-003(B) / NMB-003(B)**

This Class B digital apparatus complies with Canadian ICES-003.  
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**Simplified Declaration of Conformity**

Hereby, HORI declares that this product is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:  
<https://hori.co.uk/consumer-information/>



**For UK:**

Hereby, HORI declares that this product is in compliance with the relevant statutory requirements.

The full text of the declaration of conformity is available at the following internet address:  
<https://hori.co.uk/consumer-information/>



**PRODUCT DISPOSAL INFORMATION**

Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.



HORI warrants to the original purchaser that our product purchased new in its original packaging shall be free of any defects in both material and workmanship for a period of one year from the original date of purchase. If the warranty claim cannot be processed through the original retailer, please contact HORI customer support.

For customer support in North America and Latin America, please use our customer support form:  
<https://stores.horiusa.com/support/>



For customer support in Europe, please email [info@horiuk.com](mailto:info@horiuk.com)

**Warranty Information:**

For North America, LATAM, Australia : <https://stores.horiusa.com/policies/>



For Europe & Middle East : <https://hori.co.uk/policies/>

Actual product may differ from image.

The manufacturer reserves the right to change the product design or specifications without notice.

HORI & HORI logo are registered trademarks of HORI.

All other trademarks are the property of their respective owners.

©Nintendo. Nintendo Switch is a trademark of Nintendo.